


Features

The Ferrule-Mate is a suitable product for cleaning ferrule end-faces inside and outside of enclosures. The cleaning cloth at the tip can reach the ferrule end-face inside an adaptor panel, and also, the special protection cap can hold a ferrule or connector and allow you to clean the ferrule end-face without adapters. The Ferrule-Mate also has an adjustable tip for angle-mounted adapters.

Part description



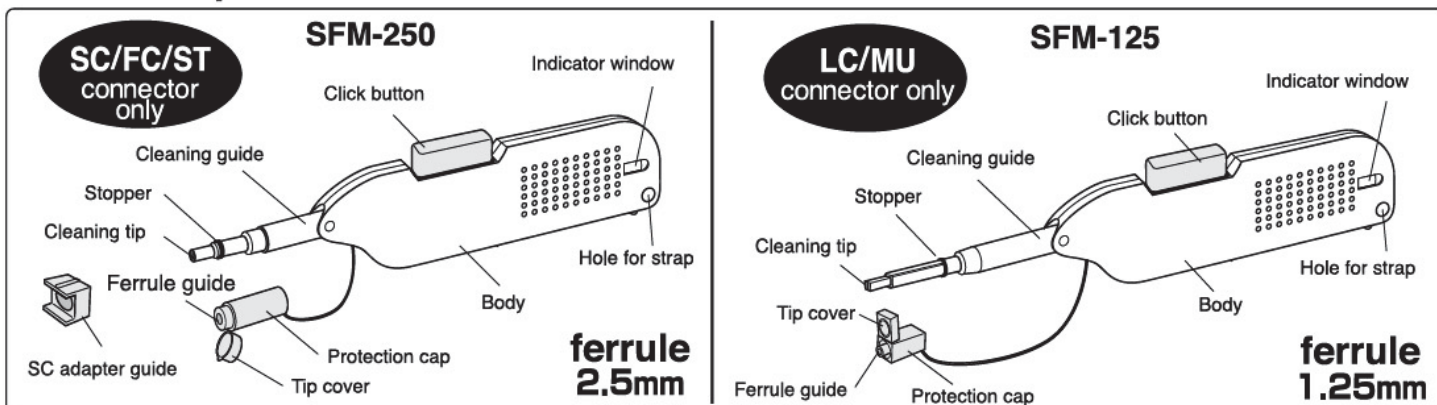


Notes on Safety

Be sure to read the following to ensure safe use

These “Notes on Safety” describe precautions that must be observed to prevent danger to the person using this and others to prevent damage to property. These precautions are categorized by the following guidelines.

Explanation of Guidelines

 DANGER	These guidelines indicate the imminent threat of fatality or serious injury.
 WARNING	These guidelines indicate the possibility of fatality or serious injury.
 CAUTION	These guidelines indicate the possibility of injuries or property damage.



Explanation of Symbols

prohibit actions	 prohibited	 disassembly prohibited	 splashing prohibited	 handling with wet hands prohibited
instructions	 instruction			





Exclusion from Liability

Seikoh Giken assumes no liability whatsoever for following items.	Damages caused by earthquake, fire outside the scope of our auliability, actions by a third party, Other accidents, intentional or accidental misuse, or use under other abnormal conditions by the user. Occasional damages (loss of business profit, discontinuation of business, etc.) arising from use or inability to use this product. Damages arising from not having observed the precautions and instructions described in this manual. Damages arising from erroneous operation resulting from use of this product in combination with connected devices and not associated with Seikoh-Giken.
---	---



DANGER Be sure to read the following safety precautions before use.

 Prohibited	Do not use or leave in places exposed to high temperatures (near fires, near stoves, in the sun, etc.) or in places where flammable gases are generated. Do not place in a microwave oven or in high-pressure vessels. Do not throw into a fire or heat it up.	may cause it to ignite, explode, malfunction, or cause a fire.
 Prohibited	Do not peer through the ferrule end-face and adapters. Do not use with in-service implements.	may cause blindness.

WARNING Be sure to read the following safety precautions before use.

 Prohibited	Do not subject to strong impact by dropping or throwing this.	may cause it to explode, generate heat, ignite, leak fluid, or malfunction.
 Disassembly prohibited	Do not disassemble, make repairs or modify. (Seikoh-Giken assume no liability whatsoever for nonconformities that arise as a result of modification.)	may cause electric shock.
 Splashing prohibited	Do not splash with water or other liquids. (Pay particular care when using this in rain, snow, at sea, at the beach, or in similar circumstances.) Never use this in places where it can be directly splashed with water or other liquids, in highly humid places such as bathrooms, or handle it with wet hands.	may cause injury or accident, or malfunction and damage.
 wet hands prohibited	Should this become splashed with liquid, immediately stop cleaning. Malfunctions caused by splashing or moisture are outside the scope of the Warranty and cannot be repaired.	

CAUTION Be sure to read the following safety precautions before use


 Prohibited	Do not store in direct sunlight (in automobiles, etc.), in places that become hot, in places that fall to extremely low temperatures, or in humid or dusty places. Do not place on unstable surfaces such as on top of wobbly benches or inclined surfaces. Keep the Protection cap and Tip cover in place while not in use.	may deform it or cause it to malfunction.										
	Do not swing around holding it by its hand strap. Do not place within the reach of small children. Do not use a hand strap if any part of it is damaged. Do not point Cleaning Tip at eyes	may cause injury or accident, or malfunction and damage.										
 instruction	When you bend Cleaning tip upwards,take care not to pinch a finger at the bend section. Do not put excess stress on the bend section during use. Do not hook the strap between Body and Protection cap.	may cause injury or accident, or malfunction and damage										
	If you experience a strange sensation on your skin, immediately discontinue use, and consult a skin specialist.	You may also experience itching, rashes, eczema or other symptoms depending on your physical condition.										
	<table><tr><td></td><td>parts</td><td>material</td></tr><tr><td rowspan="4">The following materials are used in this components</td><td>Body, Click button, Cleaning Tip, Cleaning guide, Stopper</td><td>ABS resin</td></tr><tr><td>Indicator window</td><td>PC resin</td></tr><tr><td>Protection cap, Tip cover</td><td>PP resin</td></tr></table>			parts	material	The following materials are used in this components	Body, Click button, Cleaning Tip, Cleaning guide, Stopper	ABS resin	Indicator window	PC resin	Protection cap, Tip cover	PP resin
			parts	material								
The following materials are used in this components	Body, Click button, Cleaning Tip, Cleaning guide, Stopper		ABS resin									
	Indicator window	PC resin										
	Protection cap, Tip cover	PP resin										
	Do not use this equipment if you smell a strange odor, hear abnormal sounds, detect overheating, or other abnormalities occur. If an abnormality occurs, stop cleaning. Also, if you drop or damage this, do not use it in this condition, and contact Seikoh Giken or your nearest sales agent.											

Instruction

Cleaning through Adapter

SFM-250

- 1** Remove Protection cap.

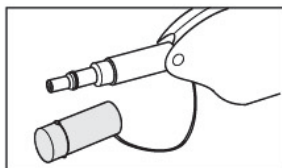


How to attach the SC adapter guide


Place the SC adapter guide over the end of Cleaning guide.

Slide it back until it touches the Stopper.

Attachment completed.
Used only for SC connector type.

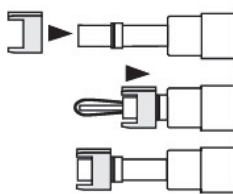


- 2** Insert Cleaning tip into adapter.

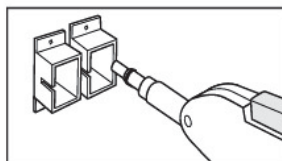


- 3** Push in until Stopper of Cleaning guide comes in contact with the adapter.

Maintain pressure to realize spring pressure inside adapter.

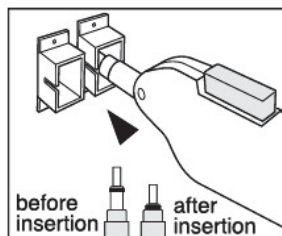


- 4** Depress and release the Click button one time.
For extremely dirty connectors, two button pushes may be necessary.

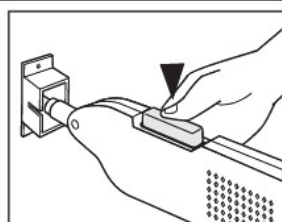


- 5** Remove Ferrule mate from adaptor and replace Protection cap before storage.

SFM-125

- 1** Remove Protection cap.

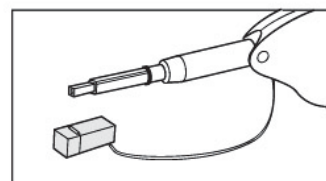


- 2** Insert Cleaning tip into adapter.

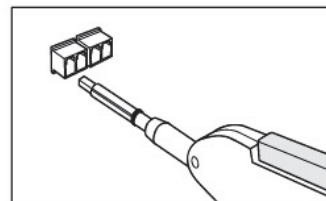


- 3** Push in until Stopper of Cleaning guide comes in contact with the adapter.

Maintain pressure to realize spring pressure inside adapter.

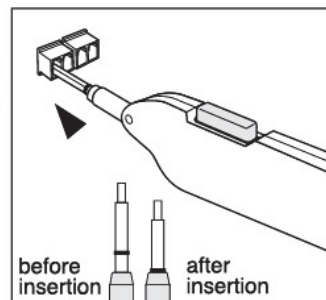

- 4** Depress and release the Click button one time.
For extremely dirty connectors, two button pushes may be necessary.

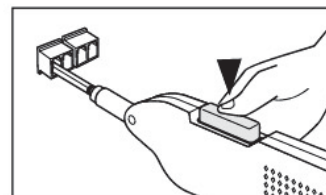


- 5** Remove Ferrule mate from adaptor and replace Protection cap before storage.


Cleaning without Adapter

SFM-250


- ① Open Tip cover.

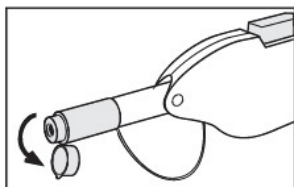

- ② Insert your ferrule or connector into Ferrule guide until ferrule or connector housing contacts the face of the Protection cap.

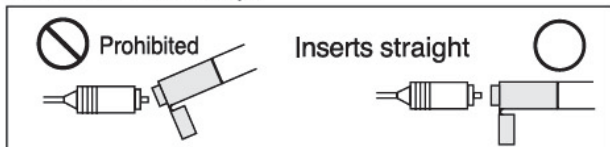


- ③ Maintain pressure on the ferrule or connector. Depress and release the Click button one time.

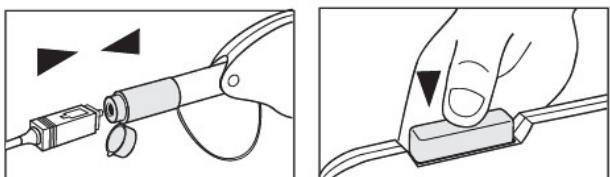


For extremely dirty connectors, two Click button pushes may be necessary.

- ④ Remove your ferrule or connector from the Ferrule guide and close the Tip cover of the Protection cap.

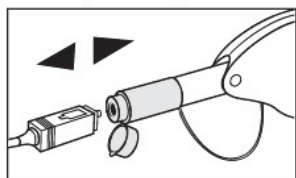


SFM-125


- ① Open Tip cover.

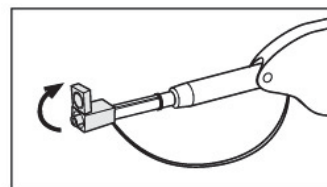

- ② Insert your ferrule or connector into Ferrule guide until ferrule or connector housing contacts the face of the Protection cap.

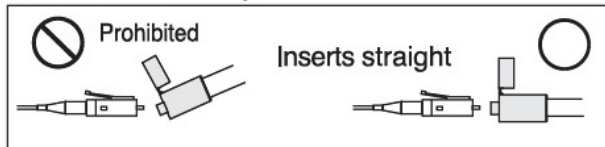


- ③ Maintain pressure on the ferrule or connector. Depress and release the Click button one time.

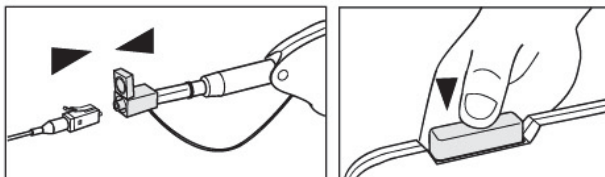


For extremely dirty connectors, two Click button pushes may be necessary.

- ④ Remove your ferrule or connector from the Ferrule guide and close the Tip cover of the Protection cap.

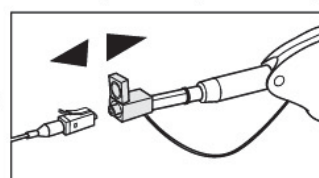

*Optifit^(R) Adapterの取付、使用方法 SFM-250専用

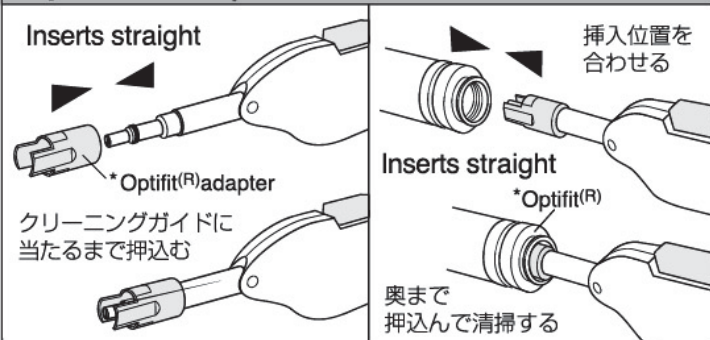

Importance How to realign the cleaning cloth



Attention

Please hold the base of the Cleaning Guide when you tilt the tip upwards.

SFM-250 can be tilted on an angle of 15, 30 or 45 degrees. SFM-125 can be tilted on an angle of 15 or 30 degrees.

Do not tilt cleaning guide down; **ONLY TILT UPWARDS.**

When you feel the Click button does not move smoothly, please check the indicator window (cleaning cloth may be empty). See figure below.




Unnecessary contact to any other part of adapter or finger may affect the cleaning performance; please keep away from dirty areas except those being cleaned.

Do not exert unnecessary force on this product. Doing so may damage the display or internal substrates, or cause a malfunction. Also, take care not to store the Ferrule Mate in a way that subjects it to extreme force, such as to bend the housing or tip.

Even if there is no exterior damage, this is not covered by the warranty.

This product is not refillable; please dispose as industrial waste or send it to **Seikoh Giken** or your distributor for disposal.

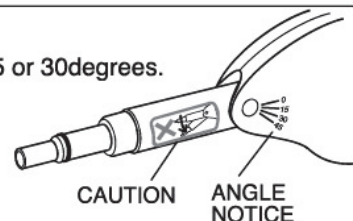

* Optifit^(R) は米国コーニング社の登録商標です

US Pat.P EP Pat.P JP Pat.P

Made in Japan

Produced and Distributed by

Seikoh Giken Co., Ltd.

296-1 Matsuhidai, Matsudo-shi, Chiba,
Japan 270-2214 tel: +81-47-388-6111
www.seikoh-giken.co.jp


Seikoh Giken USA, Inc



4405 International Boulevard, Suite B109
Norcross, GA 30093 U.S.A.
tel: +1-770-279-6602
www.sg-usa.com


**Seikoh Giken Europe GmbH
Frankfurt Branch**

Siemensstrasse 9, D-63263
Neu-Isenburg, Frankfurt, Germany
tel: +49-6102-297-705

Proper direction of Ferrule-Mate insertion for APC angle adaptor


**Correct
alignment**

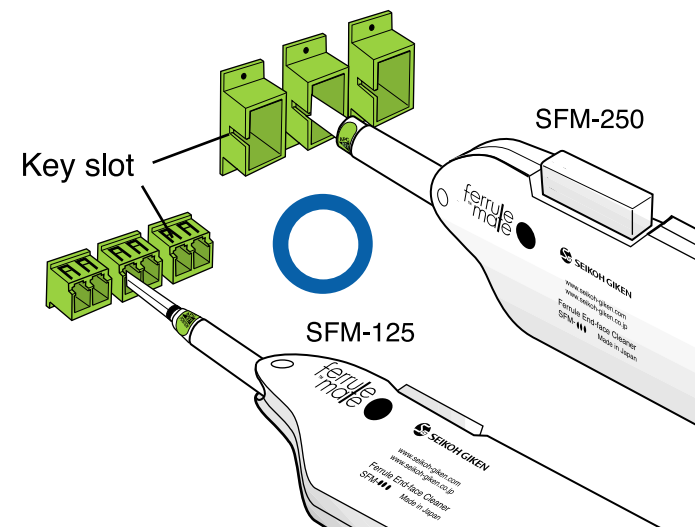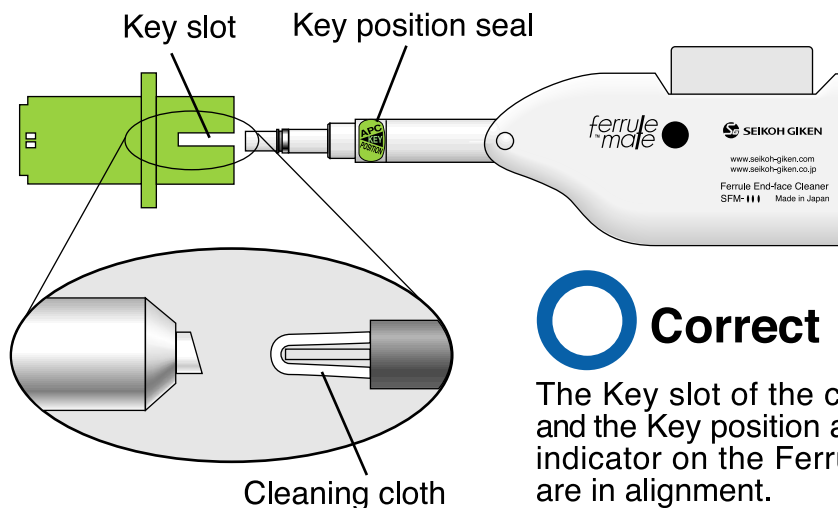


**Incorrect
alignment**

