

FerruleMate[™] Optical Interconnect Maintenance Solutions


The FerruleMate[™] by Seikoh Giken company is the latest concept in optical endface cleaning.

This economical, one-step solution allows efficient cleaning of ceramic ferrules - either through bulkhead adaptors or directly on cable assemblies - both in the outside plant or at the factory floor.

Restore your fiber optic connectors' performance - whether inside a distribution enclosure or at an outside pedestal - using the FerruleMate™ cleaning tool.



Multiple Fuctions

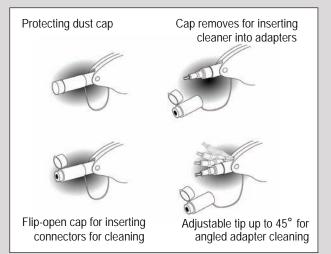

Key Features

- Proprietary tip sweeps and rotates 180° for widest cleaning area in the market
- Jam-Free mechanism delivers fresh, pre-washed, lint-fee, micro-fiber cloth
- Unique design provide controlled cleaning pressure for all ferrule sizes
- Handheld, portable, light-weight cleaner (no power source)
- Simple to use, operator controlled, push button cleaning action
- Highly effective for both Dry and Wet/Dry cleaning applications
- Designed for FC, SC, ST, LC, MU Custom tips for Mil/Aero/Video
- More than 350x cleanings per unit Less than 5 cents per use
- Approved by all TELCO Operators Call for PID/SSI ordering info
- Anti-Static materials safe for ESD sensitive environments

Specification/ Ordering Information

Part Number	SFM-250	50 SFM-125		
Ferrule Type	2.5mm	1.25mm		
Dimension (body)	L163 X W20 X H44 mm			
Dimension (tip)	L = 63mm	L = 110mm		
Weight	60g			
Applicable Connector/ Adapter	SC, FC, ST PC & Angle PC	MU, LC PC & Angle PC		



Cleaning Criteria/ Results


The FerruleMate[™] optical interconnect cleaner meets or exceeds all current and emerging standards* for fiber cleanliness in high power laser applications.

*Telcordia GR-2923-CORE, iNEMI, IEC 61300-3-35, Cisco EDCS 7027180, IPC-Association IPC-0040


An Ideal Connector will not have any contamination or scratches in the core, cladding or ferrule contact area surrounding the cladding.

- a. Zone 1- Contamination is strictly prohibited from Fiber Core Area defined as 0um to 120um.
- b. Zone 2- Contamination larger than 3um prohibited from Contact Area defined as 120um to 250um.
- c. Zone 3- Contamination larger than 30um prohibited from Ferrule Area defined as 250um to 400um.

Ferrule Inspection Standard

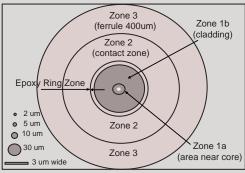

Contact Area Comparison

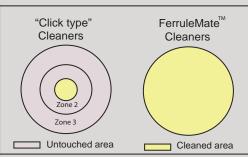

Actual Cleaning Results





Cleaning area by FerruleMate[™] is 36x larger than that of competitor

Seikoh Giken offers a variety of TipKitsM adapters that allow the FerruleMate[™] to clean many types of Mil / Aero / Video termini. Please contact the sales department for customized solutions.

Tips Standard and Customized TipKits[™] available (Telco or Mil/Aero/Video)

Part Number	M18-00772	M18-00773	M18-00775	M18-00777	M18-00774
Connector Type	LEMO 2mm Video	MIL-Aero ARINC	Diamond E-2000	MIL-Aero Circular	Corning OptiTap
FerruleMate [™] Type	SFM-250	SFM-125	SFM-250	SFM-125	SFM-250
Image	1	•		1	

WORLDWIDE SUBSIDIARIES AND SALES OFFICES:

USA

SEIKOH GIKEN USA, Inc.

Atlanta, Georgia Tel: +1-770-279-6602 Fax: +1-770-279-8839 sales@sg-usa.com

Europe

SEIKOH GIKEN Europe GmbH

Frankfurt, Germany
Tel: +49-6102-297-701
Fax: +49-6102-297-750
info@sq-euro.de

Asia

SEIKOH GIKEN Co., Ltd.

Chiba, Japan
Tel: +81-47-388-6111
Fax: +81-47-388-4477
sales.div@seikoh-giken.co.jp

